

Marshall

JCM600

JCM600 Head & JCM601 & JCM602 Combos

*Marshall Amplification plc
Denbigh Road, Bletchley, Milton Keynes, MK1 1DQ, England
Tel: (01908) 375411
Fax: (01908) 376118*

Web Site - <http://www.marshallamps.com>

*Whilst the information contained herein is correct at the time of publication,
due to our policy of constant improvement and development, Marshall
Amplification plc reserve the right to alter specifications without prior notice.*

Nov '98

Handbook

WARNING!

Please read the following list carefully.

A. ALWAYS fit a good quality mains plug conforming to the latest B.S.I. standards where necessary (UK only).

B. NEVER attempt to by-pass the fuses or fit ones of the incorrect value.

C. NEVER attempt to replace fuses or valves with the amplifier connected to the mains.

D. DO NOT attempt to remove the amplifier chassis, there are no user serviceable parts.

E. ALWAYS have this equipment serviced or repaired by competent qualified personnel.

F. NEVER use an amplifier in damp or wet conditions.

G. DO NOT switch the amplifier on without the loudspeaker connected.

H. ENSURE that any extension cabinets used are of the correct impedance.

I. PLEASE read this instruction manual carefully before switching on.

WARNING : This apparatus must be earthed!

WARNING : Do not obstruct ventilation grille and always ensure free movement of air around the amplifier!

JCM 600 Range Introduction

Marshall Amplification has been inextricably linked with valve amplification since our very beginning in 1962. Products such as the original Bluesbreaker combos, JTM 45 and Super-Lead heads were all destined to be, and have become, classics in their own right.

All of these special Marshalls produced their magical tone by driving the guitar through an all valve pre-amp into a pure valve power-amp. The JCM 600 series carry on this grand tradition but meet the demands of contemporary guitarists by providing features such as channel switching, reverb, effects loop and speaker emulated output.

Using Your JCM 600 Amplifier

Your JCM 600 Valve combo or head is easily capable of producing a wide range of usable quality tones, from glassy vintage clean, Bluesbreaker type singing lead and crunchy chord work to full blown modern high gain crush. What's more the controls are simple and intuitive to use giving you instant access to memorable Marshall tones.

Whilst one should always bear in mind that taste in tone is a very subjective matter, the following suggestions will give you a good starting point for getting some great sounds from your JCM 600 amplifier.

Clean

Make sure you select the Clean channel which is indicated by the green L.E.D. The strength and height of your pick-ups will have a great influence on the level you should set the volume on this channel before overdrive sets in. Generally speaking the volume control should be set below half way for totally clean sounds.

The tone network should be set with all three controls at 5 initially, then adjusted to suit the type of guitar and sound required. Generally single coil

pickups will require extra bass and middle to give the sound more body, but humbuckers may well require less middle and extra treble to cut through.

Vintage Overdrive

Switch to the Overdrive channel which is indicated by the Red L.E.D. Again pickups will obviously influence settings but you will probably find that gain settings of around 5 or 6 are quite adequate, the key however is to increase the master volume level. As our vintage amps didn't really have a lot of pre-amp gain guitarists used to crank the volume up to be heard which resulted in the natural classic Marshall overdrive roar. Alternatively the Clean Channel with its volume on maximum gives a very satisfying vintage type overdrive.

As far as tone settings go we would suggest that you start with the tone controls set at about 5 and then adjust to taste from there. The selection of tone settings for single coil or humbucking pickups will follow the same general pattern as for the clean sound.

Modern Hi-Gain

Switch to the Overdrive channel indicated by the Red L.E.D.

Turn the gain up to full and set the volume for the desired level. Tone controls are set to taste, though probably with the Middle control lower than the Bass and Treble controls particularly to maintain the definition when using humbucking pickups.

The best advice we could really offer is to simply experiment and above all enjoy the pure valve tone of your Marshall JCM 600 amplifier.

JCM 601, 602 & JCM600 Head

Front Panel Functions

1) Footswitch Jack

Jack socket for connection of P801 Footpedal for channel switching.

2) Push Channel Switch

Push switch for panel switching of the channel. The push switch is inoperative when the footswitch is connected.

3) Input Jack

Jack socket for the input of the guitar.

4) Volume Control

Controls the Volume of the Clean channel.

5) Bass Control

Controls the lower frequencies or bottom end in the tone of the Clean channel.

6) Middle Control

Controls the middle frequencies and fatness of the tone of the Clean channel.

7) Treble Control

Controls the upper or treble frequencies in the tone of the Clean channel.

8) L.E.D.

Indicates channel. Green-Clean. Red-Overdrive.

9) Gain Control

Controls the amount of Gain on the Overdrive channel.

10) Volume Control

Controls the volume of the Overdrive channel.

11) Bass Control

Controls the low end frequencies in the tone of the Overdrive channel.

12) Middle Control

Controls the middle frequencies in the tone of the Overdrive channel.

13) Treble Control

Controls the upper or treble frequencies in the tone of the Overdrive channel.

Please Note

The Tone Controls are interactive and adjusting one can effect the relative amounts of the others. Experimentation is the best way of finding your own personal favourites.

14) Parallel Effects Mix Control

Governs the amount of effected signal in the overall tone when used in conjunction with external effects through the parallel loop (see items 3 and 4 of the JCM 600 rear panel functions).

15) Clean Reverb

Controls the amount of Reverb on the Clean channel.

16) Overdrive Reverb

Controls the amount of Reverb on the Overdrive channel.

17) Volume

Controls the overall volume of the combo.

18) Standby Switch

Controls the H.T. supply to the valves and allows the valves to remain heated when not in use.

19) Power Switch

On / Off Switch for mains power to the amplifier.

Please Note

To prolong the life of the valves it is always advisable to switch on the Mains Power Switch (item 19) about 2 minutes before switching on the Standby (item 18).

This allows the valves to heat up to full working temperature before use. On switching off, the Standby should always be switched before the Power Switch.

JCM 601, 602 & JCM600 Head

Rear Panel Functions

1) Mains Fuse

Protects the amplifier and mains supply in the event of a fault.

Check the label on the back of the amp for the correct value. Always replace fuses with the

correct type and rating. It is a wise precaution to always carry spares.

2) Mains Input

Connects the amplifier to the mains power supply.

3) Parallel FX Loop Return Jack

Jack socket for connection from the output of an external effects processor.

Please Note

A parallel FX Loop is best suited for use with external effects processors which require a certain amount of dry or uneffected signal in the overall tone. Time based effects such as Delay and Chorus are typical examples of the effects best suited to this type of Loop.

4) Parallel FX Loop Send Jack

Jack socket for connection to the input of an external effects processor.

5) Series FX Loop Return Jack

Jack socket for connection to the output of an external effects processor.

6) Series FX Loop Send Jack

Jack socket for connection to the input of an external effects processor.

Note: The Series Loop is best suited to effects that require no dry signal such as Compressors or Graphic Equalisers.

7) D.I. Output

The JCM 600's D.I. Out is switchable between a speaker Emulated signal (pre the power amp), and a non Emulated (post the power amp) signal.

The Emulated Output captures the tonality of Vintage loudspeakers like no other D.I. furthermore this output is unaffected by the Master Volume controls therefore allowing the JCM 600's output to be turned off whilst still providing silent recording facilities.

The D.I. Output is via an XLR type connector which allows this system to be run into either (a) a line level balanced input (b) a line level unbalanced input or (c) a low level unbalanced input.

Please Note

Refer to the JCM 600 XLR Out diagrams (Below) for correct connections.

★ 8) Pre/Post Switch

Allows Line Out selection between a speaker Emulated signal (pre the power amp) and non-emulated (post the power amp).

9) Presence Control

This Master Presence control adjusts the amount of top end frequencies in the overall tone - adding crispness and bite.

10) Speaker Output

On combo formats of the JCM 600 this jack is for connection to the internal 16 Ohm speaker. On the JCM 600 Head this socket is for connection to an external speaker cabinet, such as the purpose built JCM C410A compact 4x10" angled cabinet and/or the JCM C410B compact 4x10" base cabinet.

11) Speaker Output

For connection to an external 16 Ohm speaker (The Marshall JCM C12 1x12" and JCM C212 2x12" cabinet are designed for use with JCM 600 combos).


On the JCM 600 head this output could drive a second JCM C410A or JCM C410B cabinet.

Note

The JCM 600 combos and head will deliver 60 Watts into either one or two 16 Ohm speakers, ie. 16 or 8 Ohm total impedance. The unit should not be driven into a load of less than 8 Ohms.


If you unplug the internal loudspeaker in a JCM 600 combo it is possible to connect a single 8 Ohm cabinet to the extension Speaker Output only. However, when the internal speaker is connected only a 16 Ohm extension cabinet may be used.

It is important to follow these instructions as failure to do so may lead to the amp running into the wrong impedance, which will ultimately cause damage.

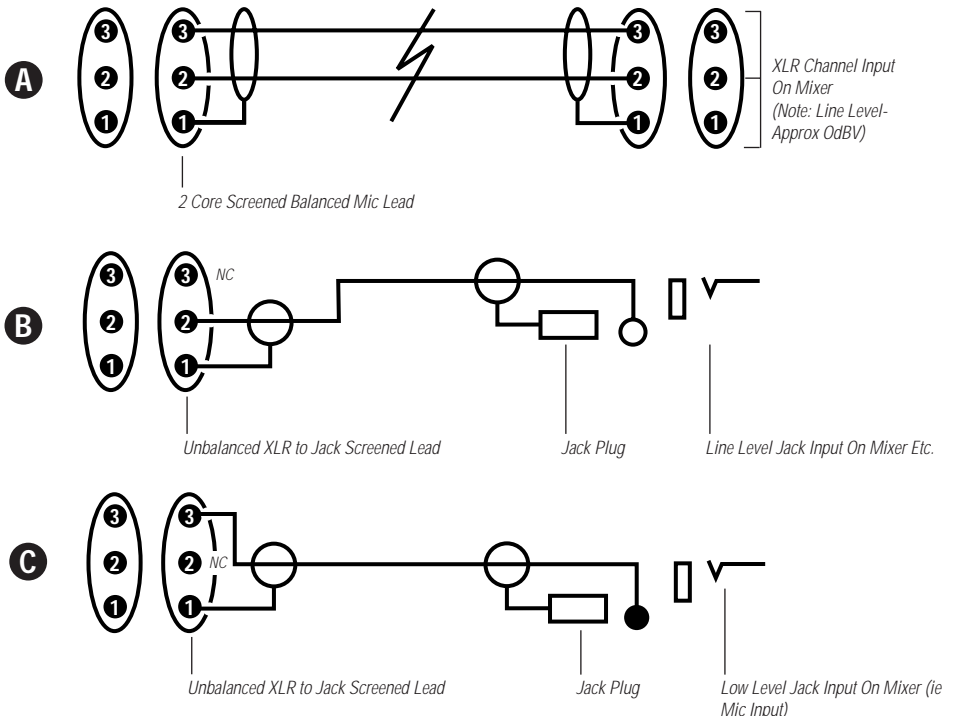


★ JCM 600 XLR Out diagram


JCM600 Head & JCM601 Combo Front Panel

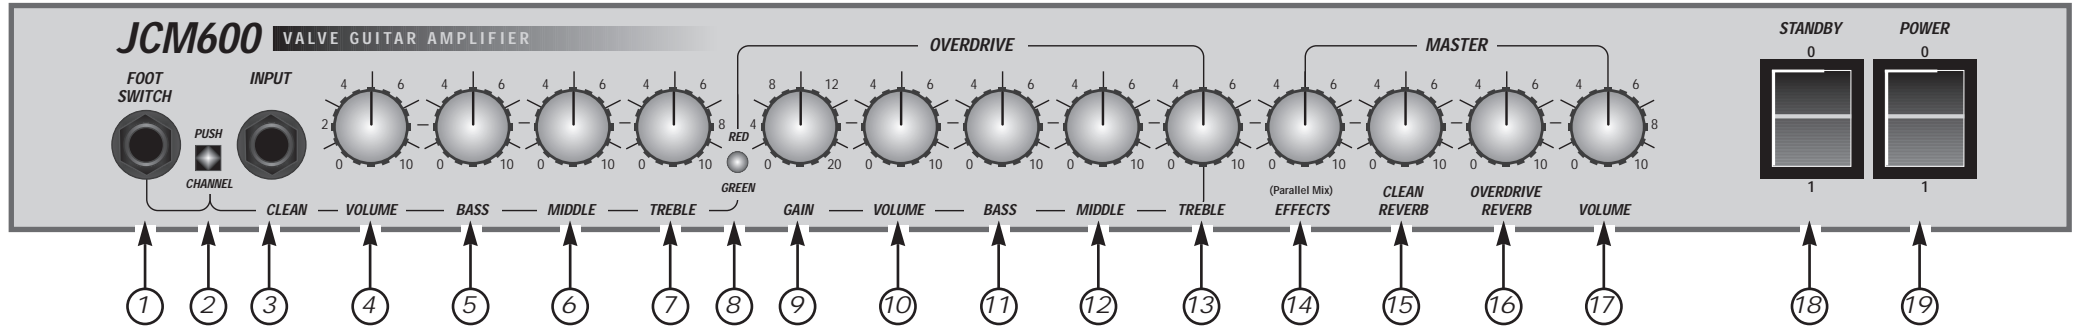

JCM602 Combo Front Panel

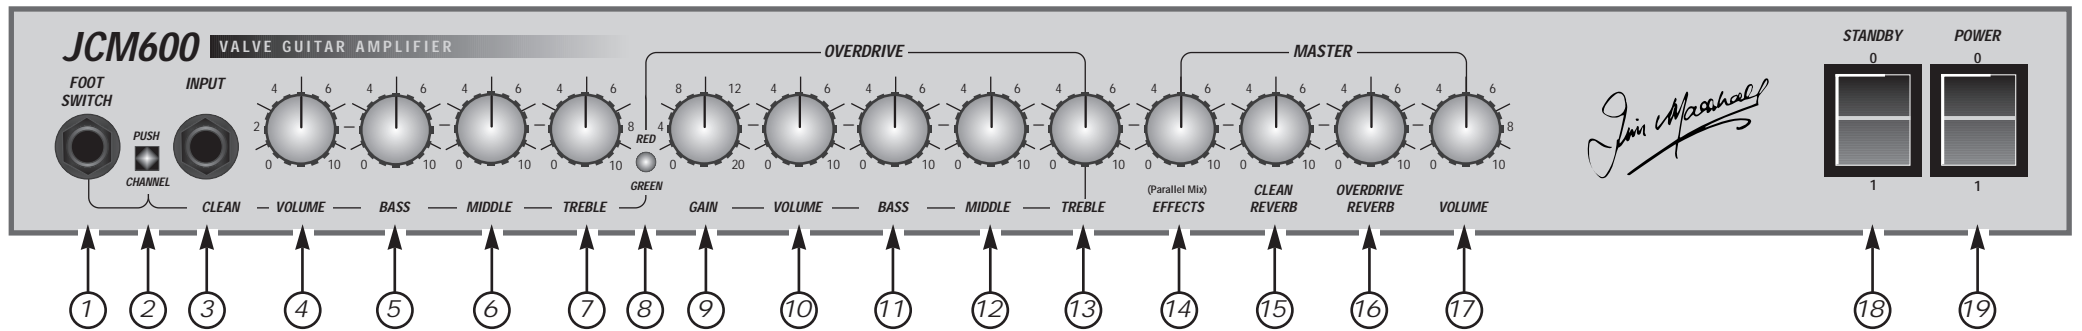

JCM601 & 602 Combo Rear Panel

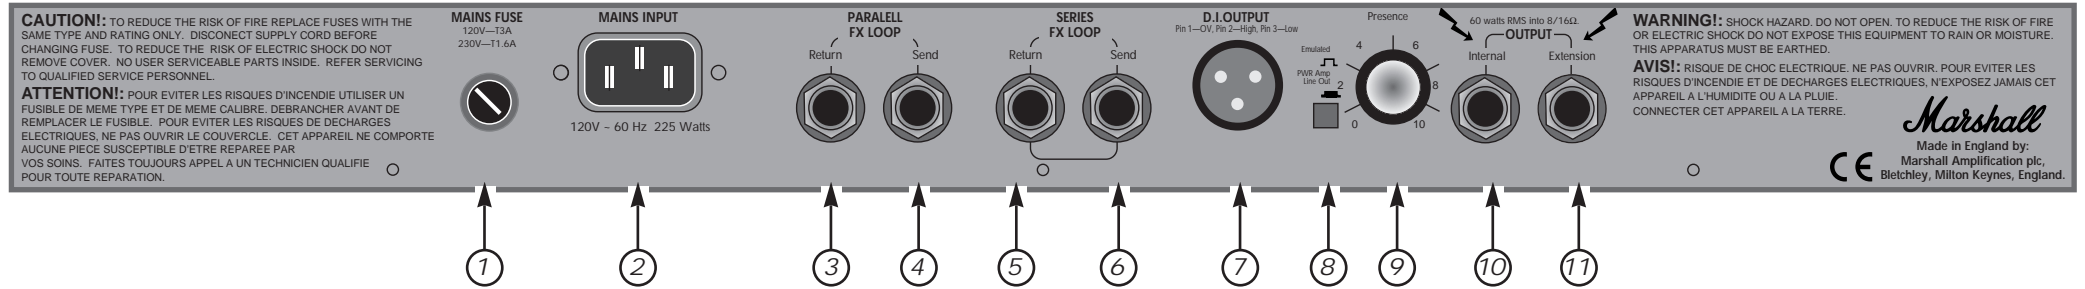

JCM600 Head Rear Panel

